

GENESIS STAAGE

PORTABLE VERTICAL WHEELCHAIR LIFT



For Low-Rise Vertical Barriers

The Genesis STAAGE lift comes fully assembled and ready to use. It is a safe, simple and cost effective accessibility solution for low-rise vertical barriers such as stages and podiums. The lower landing call station is equipped with a lockout key switch to prevent unauthorized use of the lift. It can be wheeled out of sight when wheelchair accessibility is not required.



GENESIS STAAAGE

Need Design Assistance?

Call your local Garaventa Lift representative or our Design Hotline at 1.800.663.6556

TECHNICAL INFORMATION

Power Requirements

120 VAC mains power

Rated Load

340 kg (750 lbs)

Drive System

2 HP Motor drives a 1" ACME screw

Speed

3 meters (10 ft) per minute

Controls

Up/Down constant pressure directional controls

Clear Platform Area

Standard: 36" x 54 1/2"

Travel Range

Up to 44"

Footprint

68 7/8" x 57" including wheels

Safety Devices

Self Locking Drive System
Emergency Stop Switch
Audible Emergency Alarm
Under Platform Sensor
Gate Interlocks
Lockout Key Switch
Backup Drive Nut
Manual emergency lowering

Finishes

Steel Panels and framework are finished with electrostatically applied baked fine textured satin grey paint. The gate frames and mast rails are champagne anodized aluminum extrusions.

FEATURES



Standard Features

Left/Right mast and platform configuration
Autofold ramp and wheelchair barrier
Platform sidewalls
Upper landing platform gate
Lower landing call station
Manual emergency lowering
Adjustable upper landing height
3 wheel portable system
Power cord and plug - 10 feet

Optional Features

Lower landing platform gate (not shown in illustrations)
Upper landing call station
Custom paint colors (RAL)

CLEARANCE DIAGRAM

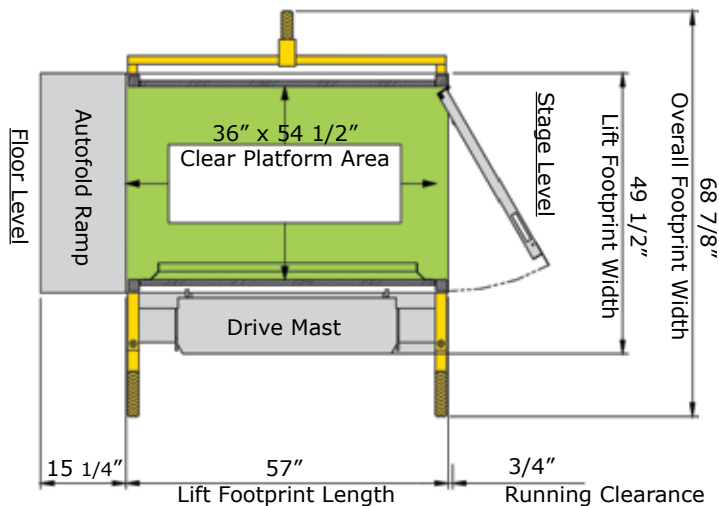

Authorized Garaventa Lift Representative

ARCHITECTS

Many resources are available at www.garaventlift.com:

- Design Specifications
- Spec-Wizard
- CAD Blocks
- Design and Planning Guides
- Photo Gallery

Contact us today

Phone: +1 604 594-0422
Toll Free: 1 800 663 6556
Web site: www.garaventlift.com

© Garaventa Lift. As we are continuously improving our products, specifications outlined in this brochure are subject to change without notice.

Printed in Canada
17396-H-PB