

Savaria® Luma

Through-floor lift

We are **Stronger Together**.

Garaventa Lift

Beautiful access
lives with the
Savaria Luma
through-floor
lift

Like a home elevator, but without the need for a shaftway, the Luma lift provides easy two-level service for your home. Finely finished with a luxury feel and panoramic views, the Luma lift is proudly designed and built



 **savaria**®

Make Your Steps Effortless

The Luma lift fits easily into your home with its self-supporting rails and concealed quiet drive system. The fully enclosed cabin with crystal clear acrylic panels, elegant lighting system and neutral white finish makes Luma feel spacious and at home in virtually any décor.

Modern simple design

Designed for simplicity, the Luma lift is easy to use with large, backlit buttons. Get peace of mind with included Savaria Link Wi-Fi monitoring by your local dealer, as well as our One Touch Alert system and in-cabin status panel.

Fast and flexible installation

Installation can be completed in just a one or two days. Construction preparation generally requires a simple floor cut-out and floor bracing. A self-supporting rail system and compact footprint gives the Luma lift floorplan flexibility. Tuck into a corner, or place it anywhere in the room.

Safety

Savaria takes pride that the Luma lift meets all safety code standards. This includes a fully enclosed cabin equipped with door interlock to eliminate any safety hazards. A safety pan sensor system stops the lift should it meet any obstruction in either direction.

Easy access

A stylish non-skid floor with sloped threshold allows for easy access without the need for a pit or ramp. Luma features a full-sized door while a second door can be added to provide straight-through access to accommodate your home's floorplan.


Efficiently powered

Luma is battery-powered and can operate both up and down for as many as five trips during a power outage. The winding drum drive is quiet and inexpensive to run on standard household power.



For more information, contact [Garaventa Lift](#).
T: 800 663 6556
E: info@garaventalift.com

Savaria® **Luma** | Through-floor lift

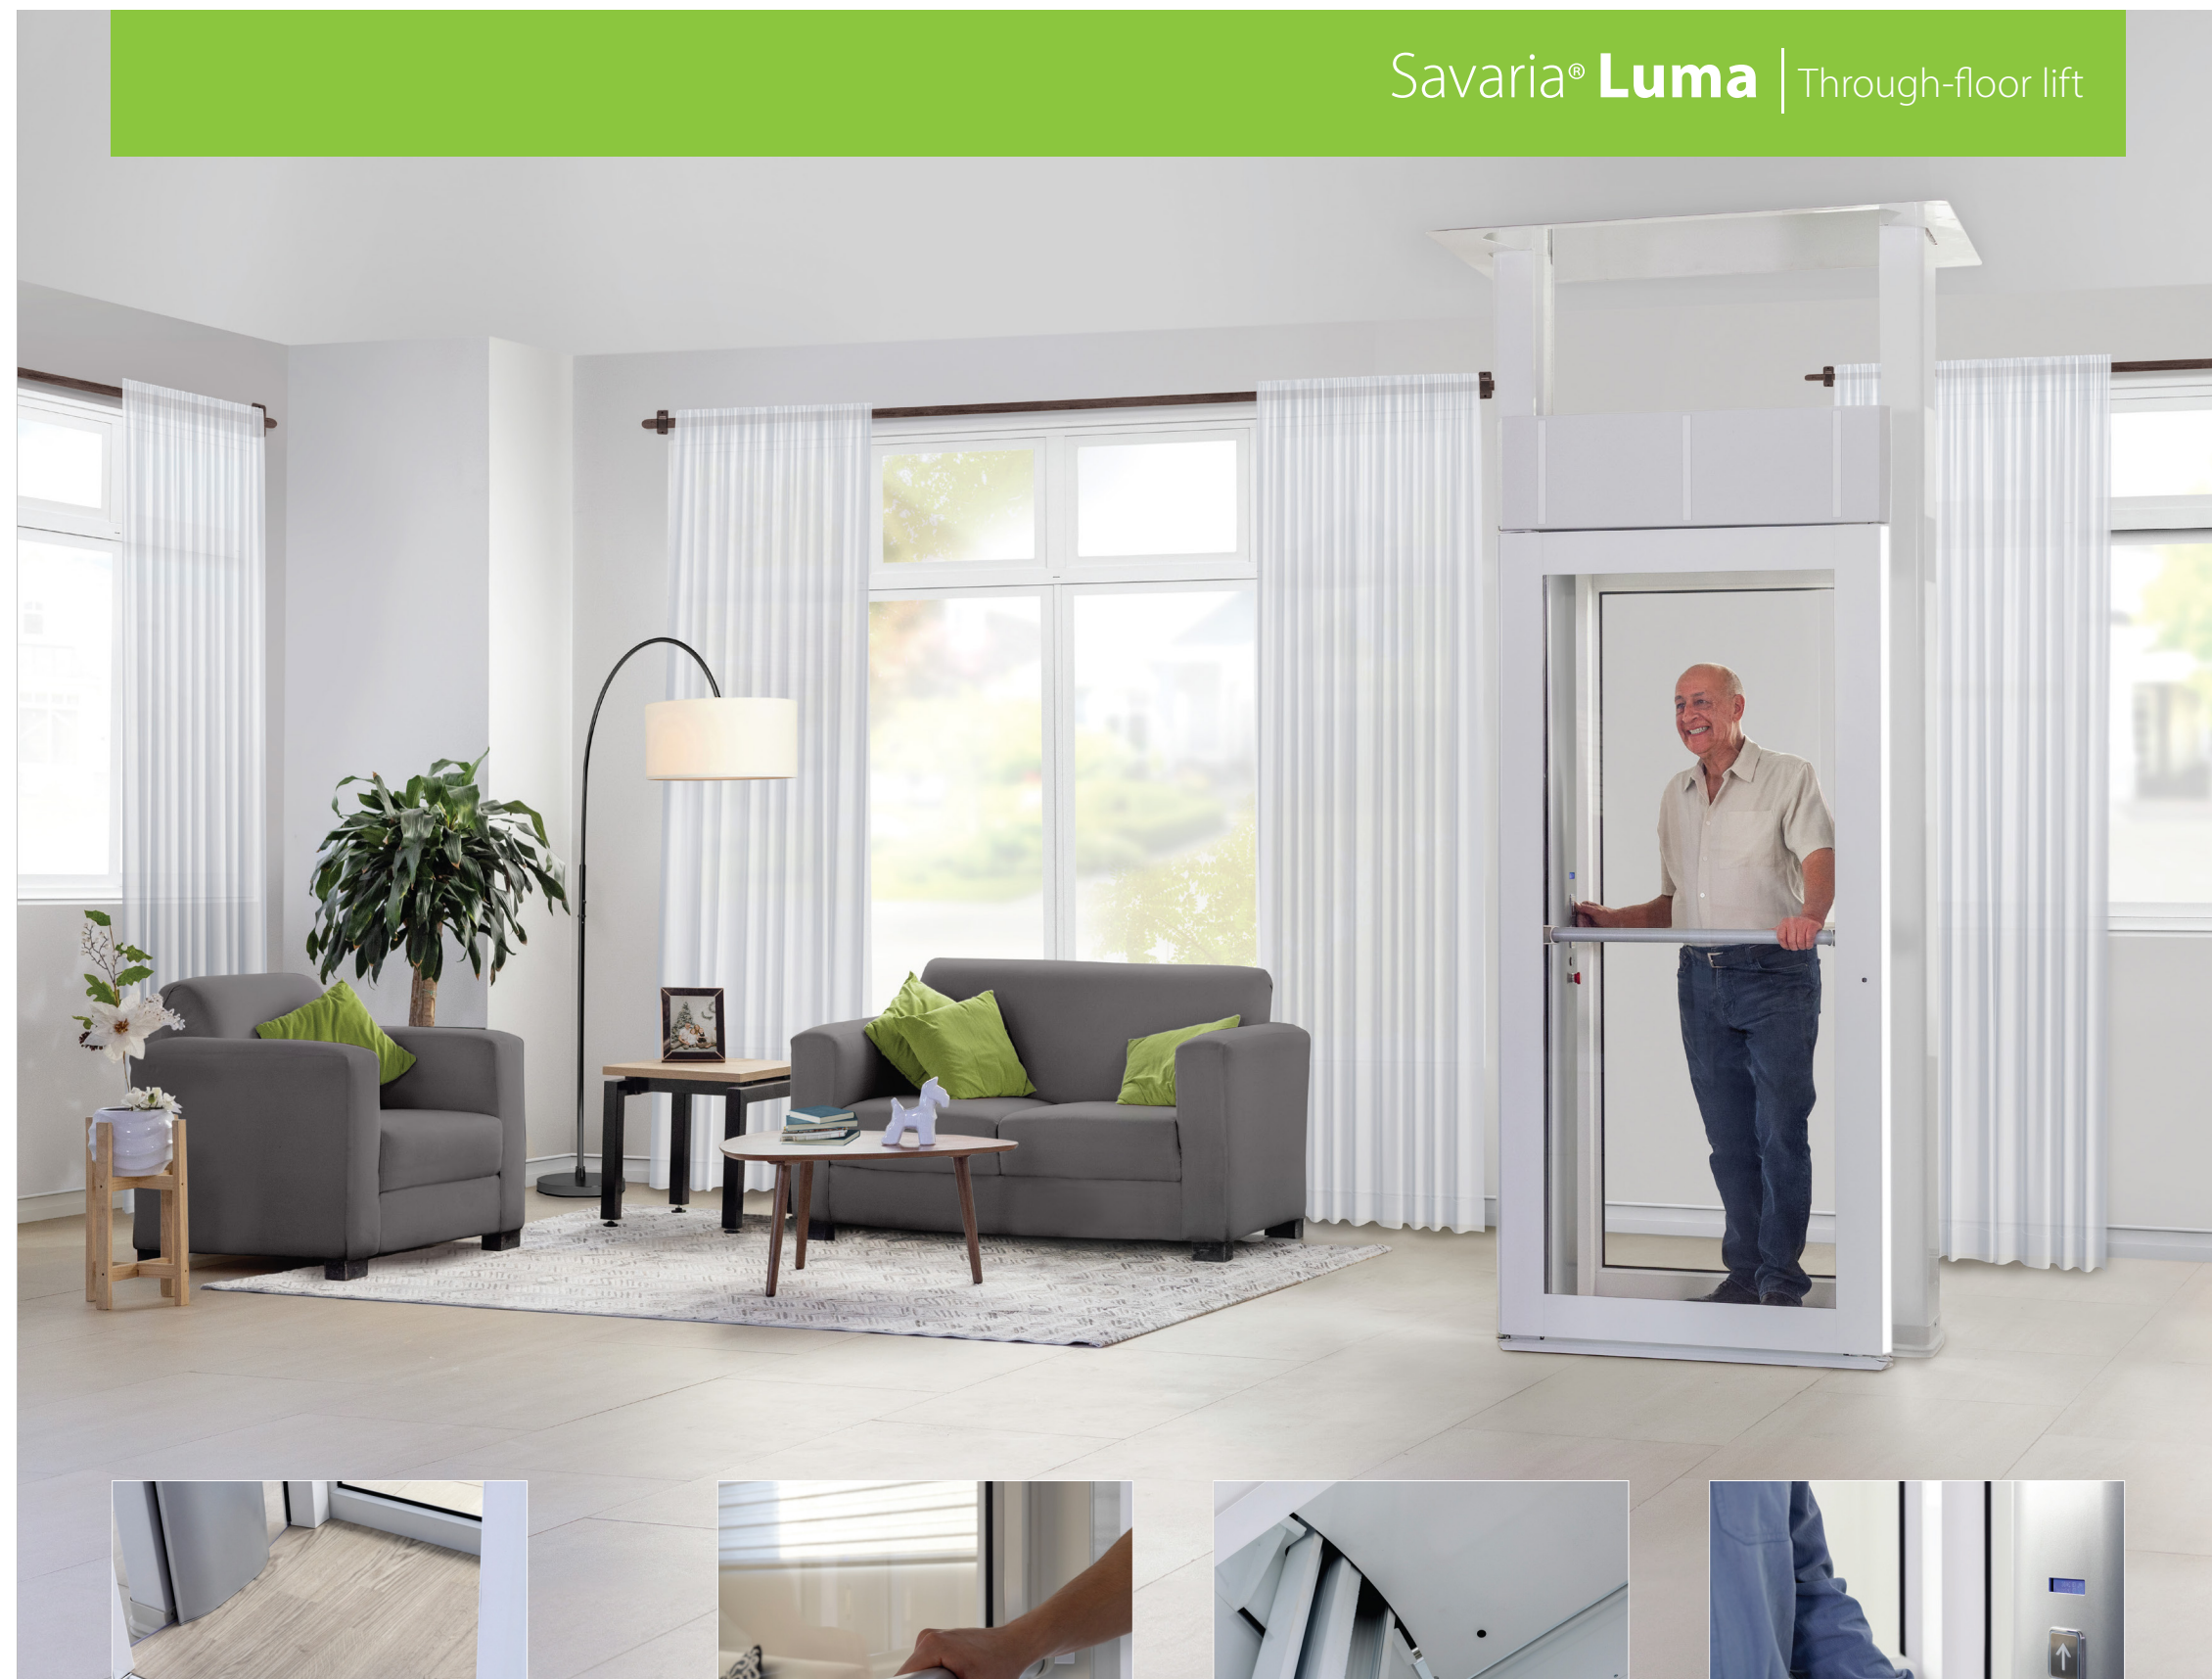

Sloped threshold and attractive non-skid flooring



Handrail and full height acrylic panels




Self-supporting rails with tucked-away cable system



Simple, intuitive operation with in-cabin lift status LCD panel

Savaria® Luma | Through-floor lift

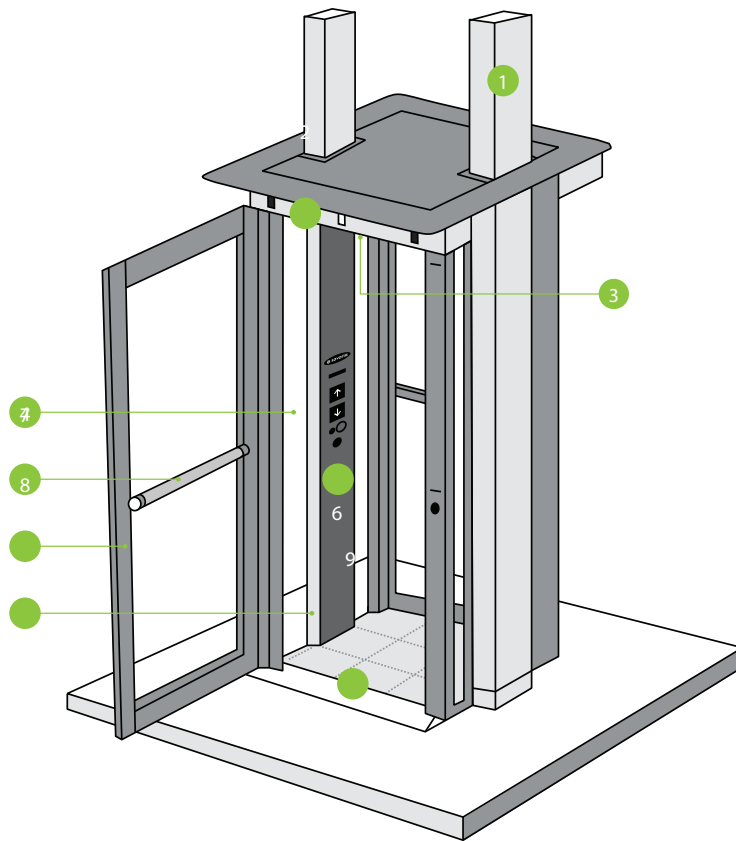

Luma Lift Features


- Self-supporting rails with tucked-away cable system
- Ceiling trim and floor cap
- Ventilation fan
- Full-sized clear panels
- Full width handrail
- Illuminated buttons and lift status panel
- Full-sized door
- Recessed lighting in door and cab panels
- Non-skid floor and sloped entrance

Specifications

Capacity	400 lb (180 kg)
Cabin size	29"W x 27 ¾"L x 78 ¾"H (739 mm x 706 mm x 2000 mm)
Floor cut-out	46 ¾"W x 37 ¾"L (1186 mm x 956 mm)
Maximum travel	165 ¼" (420 cm), 2 stops
Nominal speed	13 ft/min (0.07 m/s)
Drive system	Winding drum, operated with constant pressure buttons
Power supply	110 - 240 VAC, single phase, 5A
Warranty	36 months parts, ask dealer for details
Additional features	Interior lighting, emergency stop/alarm button, One Touch Alert system, Savaria Link Wi-Fi monitoring system, in-cabin lift status panel, nonskid flooring and full width handrail, sensors to stop the unit if it detects an obstruction, overspeed arrestor, door interlock, and two RF remote controls included

Notes: For the 2-door cab, length of the cab is 25 ¾" (655 mm). An optional short cab is available with height of 75" (1905 mm). ¹ Not compatible with 5G or eSIM cards.

Floor Cut-out

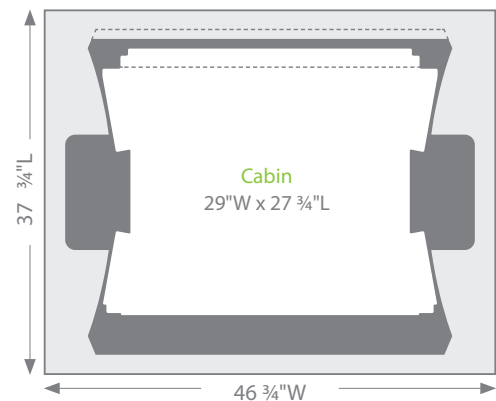

Please see the Planning Guide for more details and measure-

More questions about LUMA?

Call [Garaventa Lift](tel:6045940422) to find your local dealer.

T 604 594 0422

T 800 663 6556 (toll free North America)

E info@garaventalift.com

I www.garaventalift.com



We are **Stronger Together.**

